


UH4

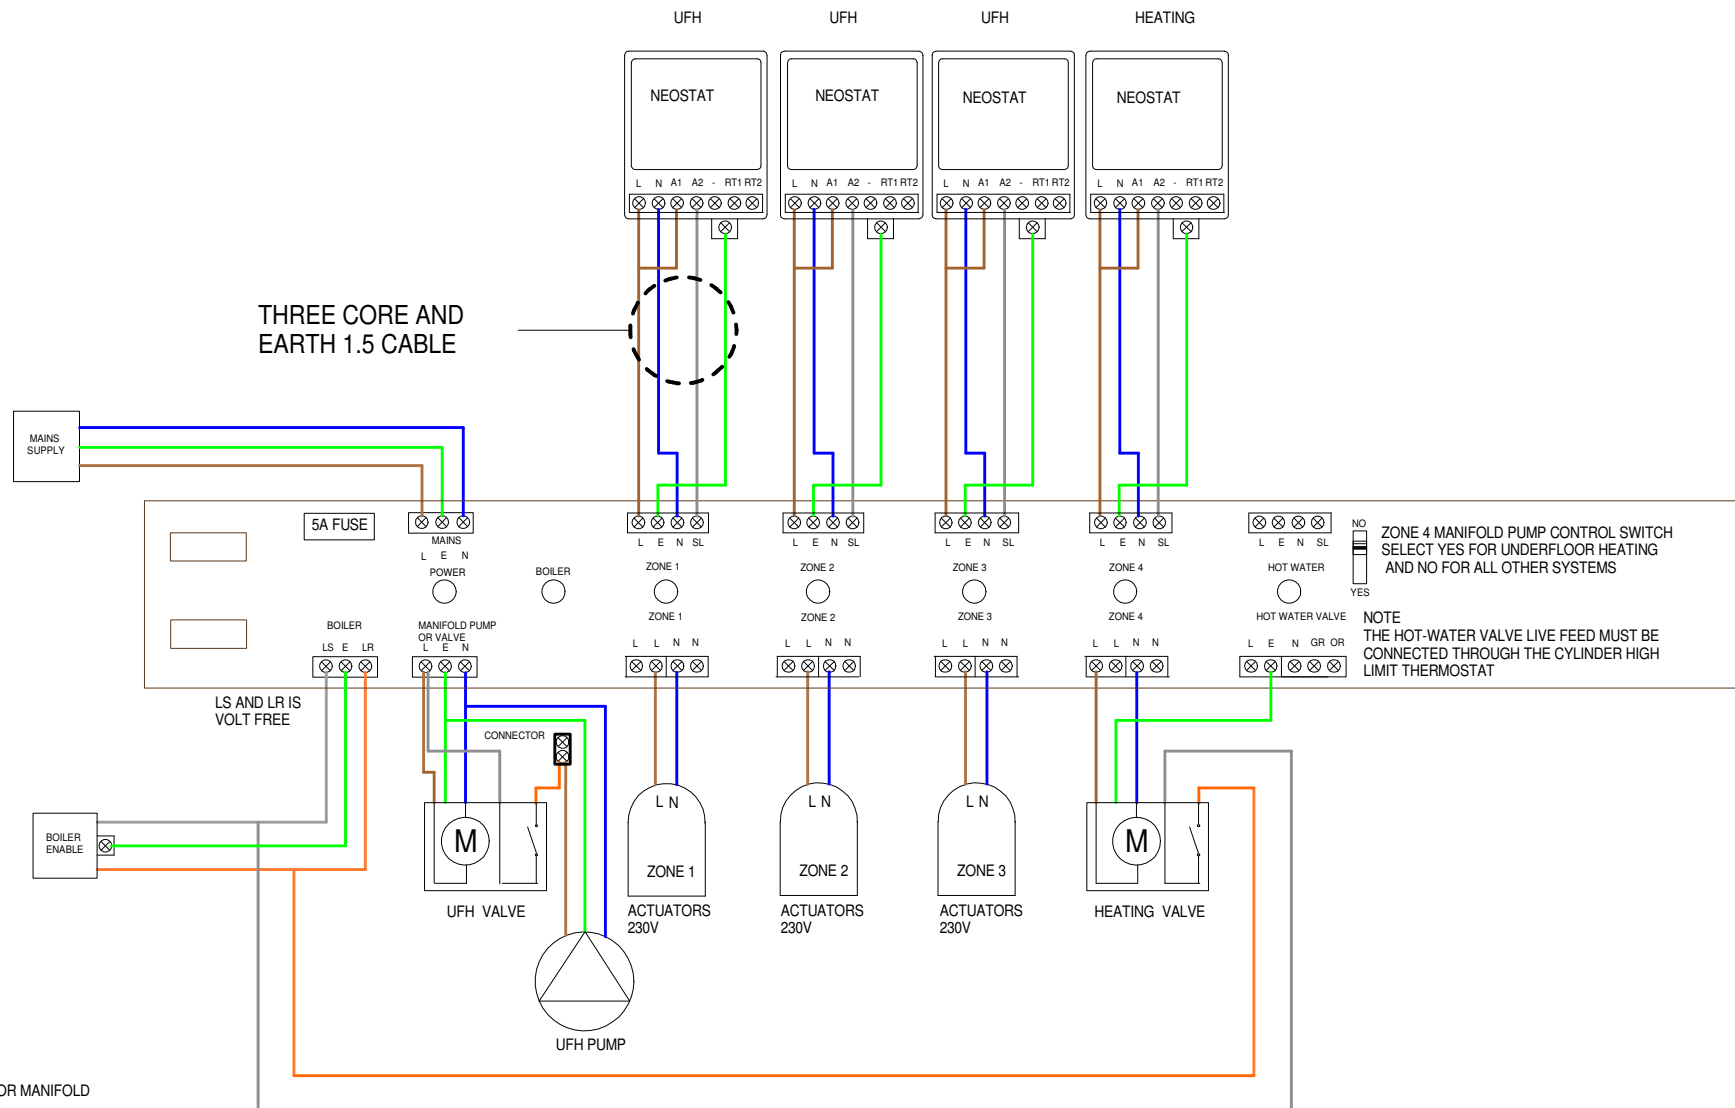

UFM UNDER FLOOR MANIFOLD

LIVE

SWITCH LIVE

NEUTRAL

EARTH

END SWITCH AND
BOILER ENABLE

This equipment should be installed by an appropriately qualified/ registered electrician.
Fully read the instructions for proper wiring before applying power.
The warranty does not cover damage from improper wiring or installation.

DRAWING 114
NEOSTAT TO UH4
HEATMISER UK
01/05/19